



京中台 中巾(三方金)

板寸法	高x巾x奥
1.5x3.0	150x70x37
1.8x3.5	175x85x43
2.0x4.0	195x95x42
2.0x4.5	212x94x42
2.0x5.0	240x98x49
2.2x4.5	220x103x45
2.2x5.0	237x102x43
3.0x6.0	282x133x56
3.5x6.0	280x150x54
4.0x6.0	282x165x55

千倉(並) 中巾(三方金)

板寸法	高x巾x奥
1.5x3.0	160x71x38
1.8x3.5	182x87x41
2.0x4.0	
2.0x4.5	
2.0x5.0	
2.2x4.5	226x107x45
2.2x5.0	241x103x45
3.0x6.0	289x135x53
3.5x6.0	290x150x53
4.0x6.0	292x165x55



筆返し回(三方金)

寸法	高x巾x奥
3.0	217x94x63
3.5	254x103x65
4.0	278x112x69
4.5	320x119x73
5.0	337x130x78
6.0	391x155x90



柱付筆返過去帖入

寸法	高x巾x奥
4.0	297x135x70
4.5	322x143x75
5.0	351x152x78
6.0	403x165x86
7.0	463x210x92

五重座回

寸法	高x巾x奥
3.0	233x95x69
3.5	264x101x69
4.0	289x119x81
4.5	319x128x86
5.0	351x134x93
6.0	412x141x94

千倉座回出(面粉)

寸法	高x巾x奥
4.0	288x118x74
4.5	316x133x75
5.0	344x133x81
6.0	395x156x83